

### 10.Drain Filter

#### A: SPECIFICATION

Canister is a non-disassembled part, so do not remove the drain filter from canister. Refer to “Canister” for removal and installation procedure. <Ref. to EC(H6DO)-5, REMOVAL, Canister.> <Ref. to EC(H6DO)-5, INSTALLATION, Canister.>